



DWG #	AL PART #	AL DESCRIPTION
139057 COMMON KIT-RECLINER-HOME THEATRE		
1	136995	COMMON CBL-DC PWR SOCKET W/CORD
2	136996	COMMON CBL-SECONDARY EXT PS10
3	137095	COMMON CBL-POWER CORD-PS10
6	137220	COMMON POWER SUPPLY BOX PS10
7	138935	COMMON SUPPLY UNIT SU04
8	138936	COMMON CABLE N400010592
145995 PIN/CLIP KIT-RECLINER-HOME THEATER		
9	138937	COMMON CLIPS-C MOTOR
10	138938	COMMON PIN-FRONT 2915040
11	138939	COMMON PIN-BACK N150240127
OTHER PARTS		
4	137215	COMMON ACTUATOR LM35_05 ALU-BACK
5	137216	COMMON ACTUATOR LM35_05 ALU-FOOT
12	140055	COMMON SPACER NYLON .406X.750OD.560
13	140056	COMMON SPACER NYLON .650X1.00OD.373
14	140795	COMMON BRACKET DC POWER SOCKET
20	140255	UNIQUE BRACKET-BATTERY MOUNT
16	136997	UNIQUE CABLE-Y CONNECTOR
17	140256	UNIQUE BRK CTRL PNL-MOTORIZED REC
139056 BATTERY KIT-RECLINER-HOME THEATRE		
18	137218	UNIQUE POWER SELECTOR BOX
19	145915	UNIQUE BAT BX ATCH-PS10 BSA1.2 A/h
COMFORT RECLINER CONTROL KIT		
15	137224	UNIQUE CONTROL PNL-MOTORIZED REC
HOME THEATRE CONTROL KIT		
21	137221	UNIQUE CTRL PNL-HOME THTR W BK LIGHT
CUP HOLDER KIT		
22	137056	UNIQUE CUP HOLDER WITH LIGHT
139055 WAND KIT-COMFORT RECLINER		
23	137222	UNIQUE RF RECEIVER BOX
24	137223	UNIQUE RF WAND

CIAR PART #	CIAR DESCRIPTION	QTY
N400010564	DC POWER SOCKET	1
N400010567	CABLE	1
N400010333	CABLE	1
N500070085	PS10	1
N500080968	SU04	1
N400010592	CABLE	1
2932020	2932020	4
2915040	2915040	2
N150240127	N150240127	2
N500092068	LM35_04 BACKREST	1
N500092069	LM35_04 FOOTREST	1
		4
		1
		1
		1
N400010530	"Y" ADAPTER CABLE	1
		1
N400080070	POWER SELECTOR	1
N500080893	PS10 BSA(BAT1.2 Ah)	1
N500040891	SEAT ACTIV.HTS6	1
N500040892	CTRL PNL HTS7	1
		1
N500200010	RF RECEIVER BOX	1
HCRF_1	RF WAND	1