





1. Remove Back from Recliner

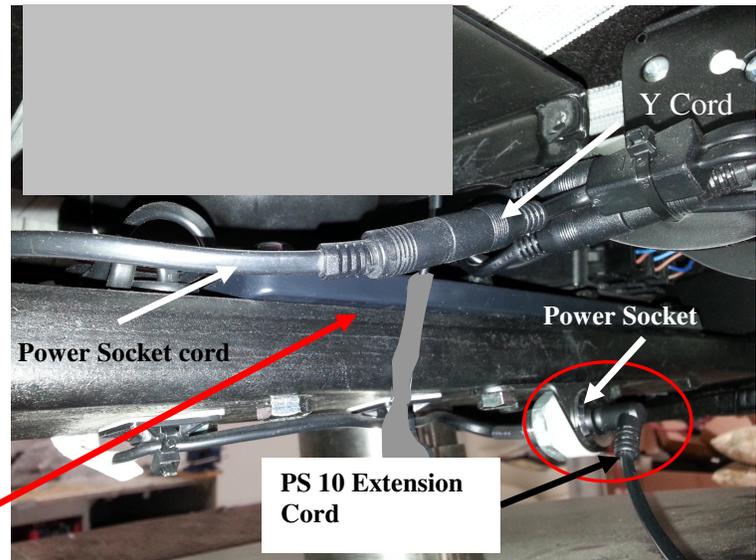


2. Wiring showing the PS10 Extension Cord from the Transformer plugged into the Power Socket, and the Power Power Socket Cord Plugged into the Y Cord

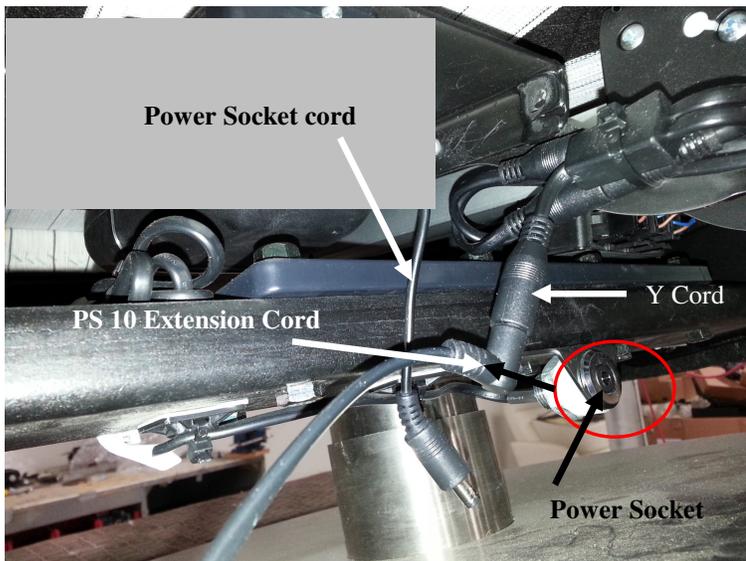


3. Unplug Power Socket Cord from Y Cord and unplug the PS10 Extension Cord from Power Socket. Next plug the PS10 Extension Cord into the Y Cord and test the chair. If the Recliner does not operate then move on to the SU04 And Switch testing instructions below on page 2




1. Remove Back from Recliner

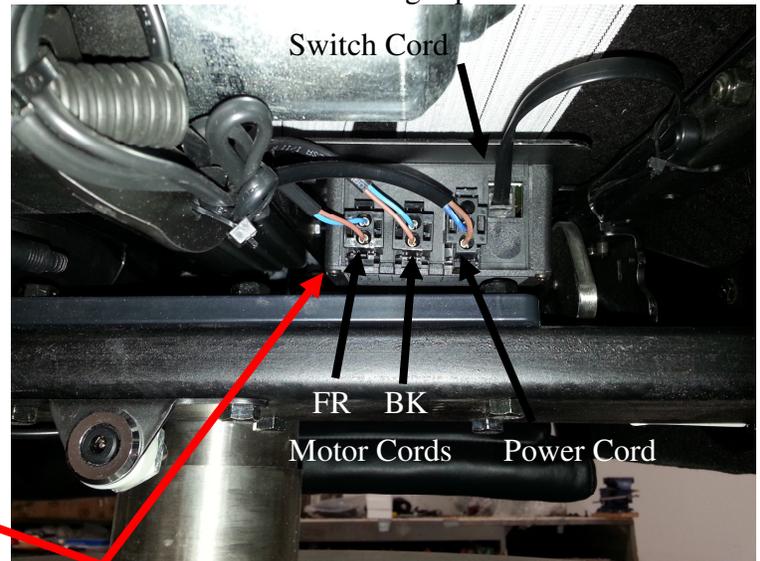


2. SU04 Control Box

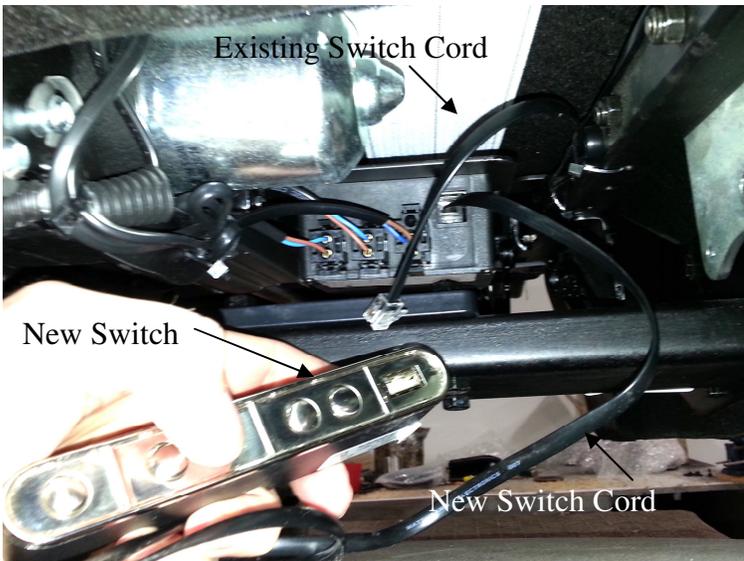

3. Unplug existing Switch Cord and plug in new Switch Cord – Test operation; if everything works replace Switch

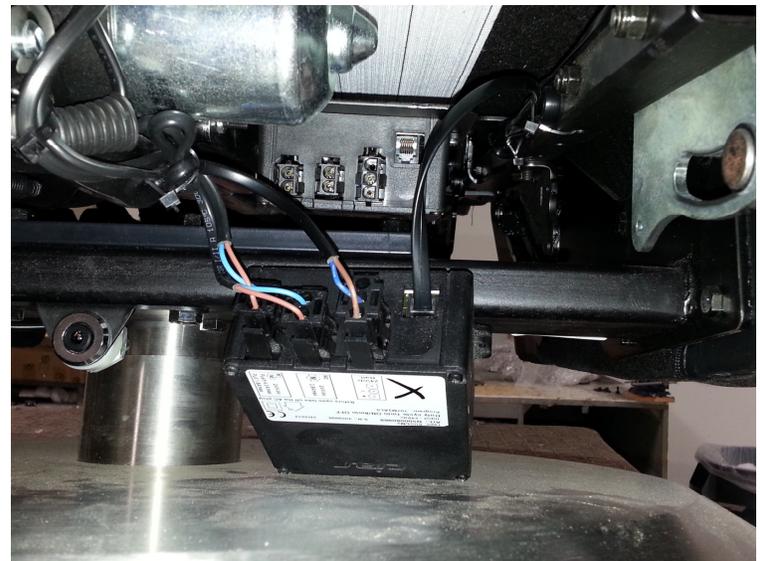

4. If new Switch did not work; Plug old switch, motor, and Power Cords into new SU04 box and test operation. If everything works, then replace the SU04 Box. If it still does not work plug in the new switch cord and test. If the recliner still does not operate then the motors are bad.

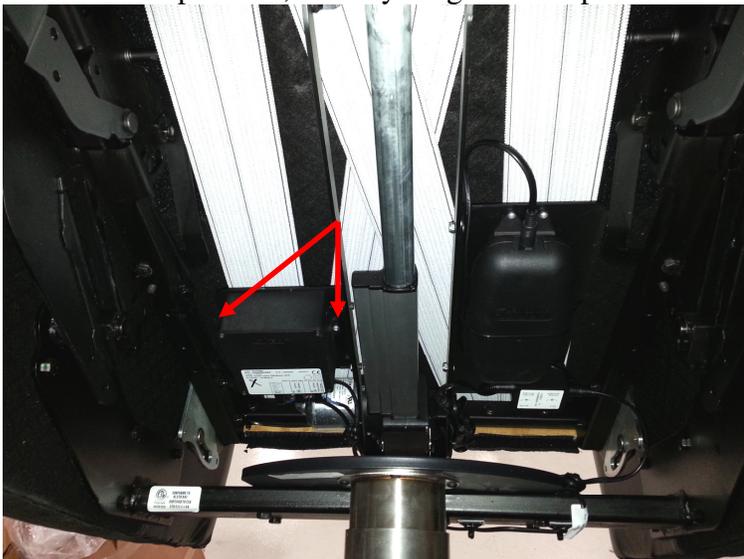

5. To Replace SU04 Box: Remove the two screws/ nylon nuts Holding the Box to the Bracket and replace with the new SU04 Box. Plug in all cords.