






1. Remove Back from Recliner

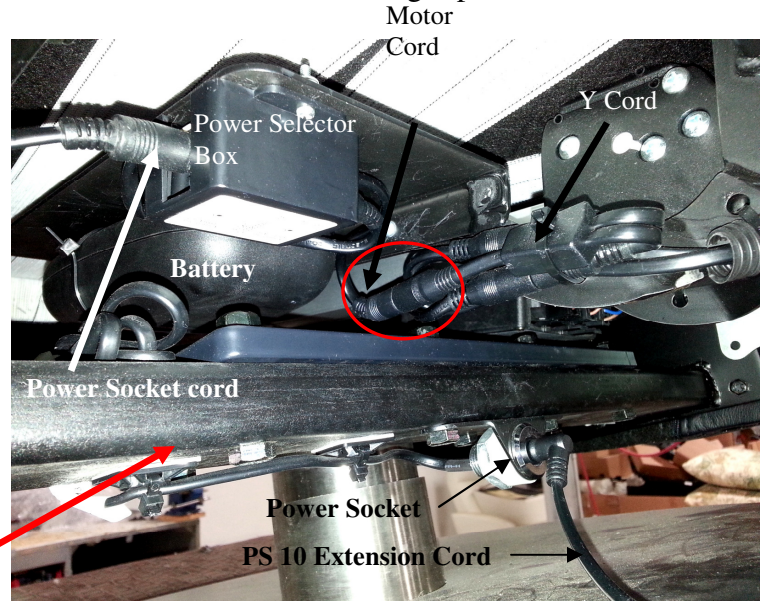

2. Power system with Battery installed and Transformer Plugged into the wall

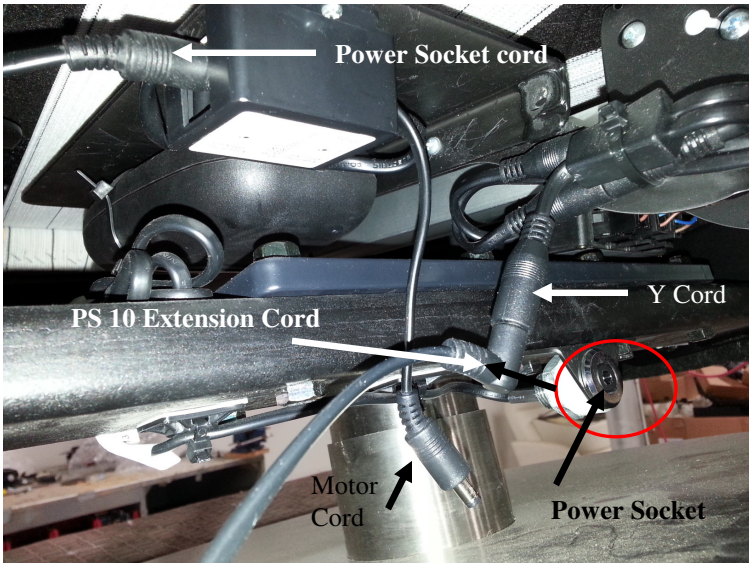


3. Unplug Motor Plug from Y Cord and unplug PS 10 Extension cord from the Power Socket. Plug the PS 10 Extension cord directly into the Y Cord and test the Recliner. If the Recliner operates either the Power Socket or the Power Selector Box are defective.

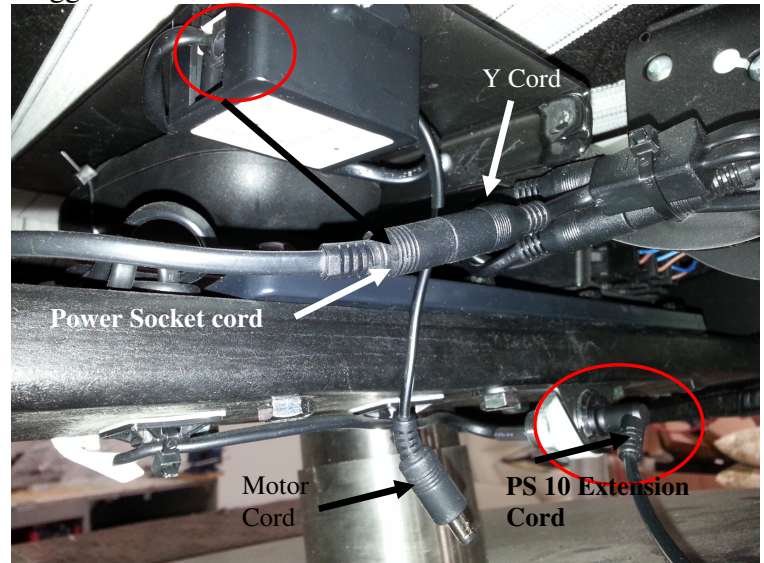


4. Plug the PS 10 Extension Cord into the Power Socket and unplug the Power Socket Cord from the Power Selector Box. Plug the Power Socket Cord into the Y Cord. If the Recliner operates the Power Selector Box Is defective. If the Recliner still does not operate then return the plugs to the position shown in figure 3 and move on to page 2 to trouble shoot the SU04 Box and the Switch.




1. Remove Back from Recliner

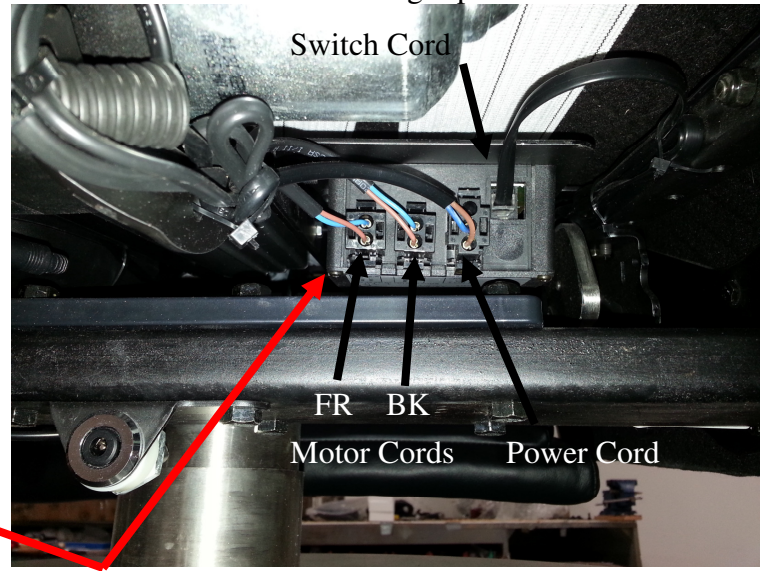

2. SU04 Control Box

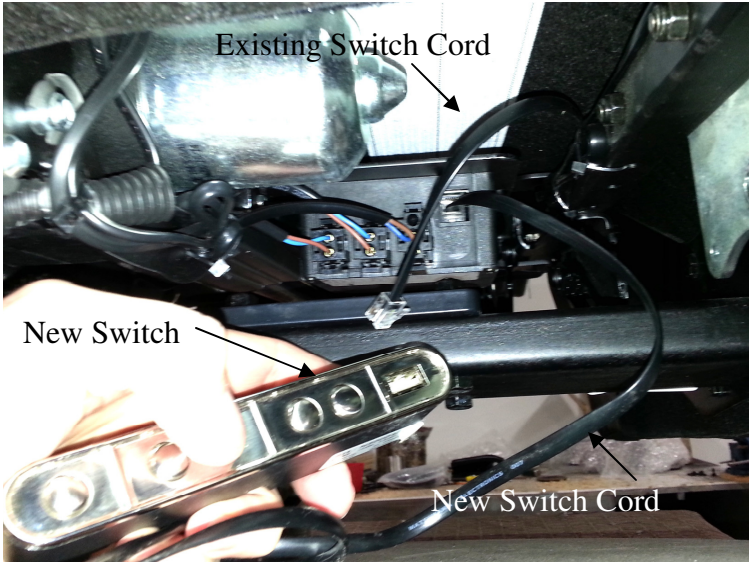

3. Unplug existing Switch Cord and plug in new Switch Cord – Test operation; if everything works replace Switch

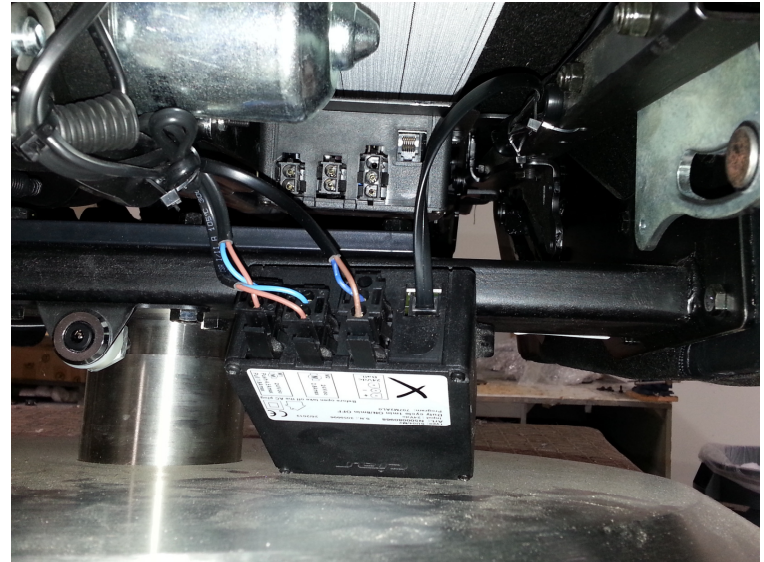

4. If new Switch did not work; Plug old switch, motor, and Power Cords into new SU04 box and test operation. If everything works, then replace the SU04 Box. If it still does not work plug in the new switch cord and test. If the recliner still does not operate then the motors are bad.



5. To Replace SU04 Box: Remove the two screws/ nylon nuts Holding the Box to the Bracket and replace with the new SU04 Box. Plug in all cords.